

mini

ACA CURRENT ADAPTER


Model : CA-201

ISO-9001, CE, IEC1010



Lutron

LUTRON ELECTRONIC

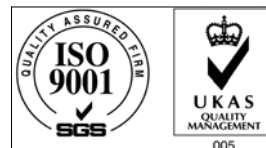

The Art of Measurement

MINI ACA CLAMP ADAPTER

Model : CA-201

Range	2 ranges - 20 A, 200 A	
Output	200 A	1 AC mV/1 ACA.
	20 A	10 AC mV/1 ACA.
Accuracy	$\pm (1.2 \% + 0.5 \text{ AC mV})$.	
Power Supply	No need battery.	
Dimension	HWD 180 x 47 x 35 mm.	
Weight	150 g/0.49 LB.	
Applications	To match DMM's ACV 200mV or AC 2 V range be used as a Precision ACA Clamp Meter.	

* Appearance and specifications listed in this brochure are subject to change without notice. 0609-CA201